

QL3 Electro-Pneumatic Pressure Regulator

Specifications

Electrical

| | |
|--------------------------|--------------------|
| Supply Voltage | 15-24 VDC |
| Supply Current | 250 mA |
| Command Signal | 0-10 VDC 4-20 mA |
| Command Signal Impedance | |
| VDC..... | 10 K Ω |
| Current | 100 Ω |

Analog Monitor Output

| | |
|---------------|-------------------------------|
| Voltage | 0-10 VDC @ 10 mA max |
| Current | 4-20 mADC sinking or sourcing |

Mechanical

| | |
|-----------------------------|---------------------|
| Inlet Pressure..... | 0-125 PSIG |
| Pressure Range..... | 0-110 PSIG |
| Min pressure range..... | 0-10 PSIG |
| Output Pressure | 0-100% of range |
| Max Flow Rate | 25 SCFM |
| Min Closed End Volume | 5 in ³ |
| Port Size | 1/4" NPT (BSPP opt) |
| Filtration Recommended..... | 40 micron |
| Linearity | < \pm 0.3% FS |
| Accuracy | < \pm 0.4% FS |
| Resolution | \pm 0.05% FS |
| Hysteresis | \pm 0.05% FS |
| Repeatability | \pm 0.2% FS |
| Temperature effect | 1% per 25° C |

Wetted Parts

| | |
|--------------------------|--|
| Elastomers† | Buna-N |
| Manifold..... | Nickel-plated aluminum, nickel-plated brass |
| Valves..... | 430FR SS, 360 brass |
| Seal Material..... | Viton, Buna-N |
| Pressure Transducer..... | High temp polyamide, alumina ceramic, epoxy, RTV and silicon |

Physical

| | |
|----------------------|---------------------|
| Operating Temp | 32-158° F (0-70° C) |
| Weight | |

| | |
|----------------|-------------------|
| Brass | 2.2 lbs (1.0 Kg) |
| Aluminum | 1.5 lbs (0.68 Kg) |

| | |
|-----------------|-------------------|
| Housing..... | Anodized Aluminum |
| Connector | 6-pin Hirschmann |

† Pressure ranges are customer-specified.

Output pressures other than 100% available.

‡ Others available



CONNECTION PROCEDURE

Pneumatic Connections

CAUTION: Use only the thread sealant provided. Other sealants such as PTFE tape and PTFE paste can migrate into the fluid system causing failures.

1. Mount the valve accordingly. For low-pressure QL3 units (<30 psi), mount upright to ensure proper functionality. For all other scenarios, valve can be mounted in any position without affecting performance. A variety of mounting brackets (See ordering info) can be used to attach valve to a panel or wall surface.
2. A typical 40 micron in-line filter is recommended on the inlet of the QL3 valve. This is available from Proportion-Air as part number FPP-2.
3. A 1/16" plug is supplied with the valve. It can be used to plug the "Alternate Exhaust Port." (See Figure 1 for port location)

Positive Pressure Units

1. Connect supply pressure to the "I" port not to exceed rated supply pressure. (See Table 1)
2. Connect the outlet "O" port to the device being controlled.
3. The "E" exhaust port can be plumbed to a point outside the work area, fitted with a muffler or left open to atmosphere as the application dictates.
4. Proceed with electrical connection.

TABLE 1

| Max. calibrated pressure: | Max. inlet pressure: |
|---------------------------------------|----------------------|
| 5 Through 10 PSIG (Positive) | 15 PSIG (1 Bar) |
| 10.1 up to 30 PSIG (0.70 up to 2 Bar) | 35 PSIG (2.4 Bar) |
| 31 up to 100 PSIG (2.1 up to 7 Bar) | 110 PSIG (7.6 Bar) |
| 101 up to 150 PSIG (7 up to 10.3 Bar) | 165 PSIG (11.4 Bar) |

WARNING

These products are intended for use in industrial compressed gas systems only. Do not use these products where pressures and temperatures exceed the specifications listed.

ELECTRICAL CONNECTIONS


1. Turn off all power before making electrical connections.
2. Identify the valve's command input and analog output using the calibration card included in the package and the ordering information section on the last page of this sheet.
3. Proceed to the appropriate section corresponding to the type of valve being installed.

NOTE: ALL COLOR CODES RELATE TO QL3s ORDERED FROM THE FACTORY WITH PREASSEMBLED QBT-C-X CABLES.

COMMAND SIGNAL CONFIGURATIONS


Voltage Command Valves (E, K, V)

All voltage command QL3s use common mode voltage, meaning the DC Common pin (Pin 1) is the common reference for both power and command. Pin 1 is used as both the command signal common and power supply common. The following diagram shows the proper connections.

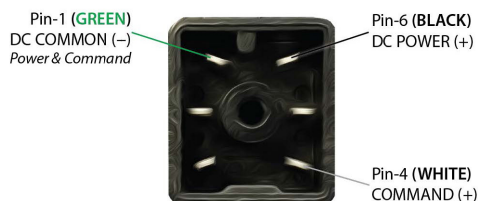


COMMAND SIGNAL CONFIGURATIONS

Voltage Command Valves (E, K, V)

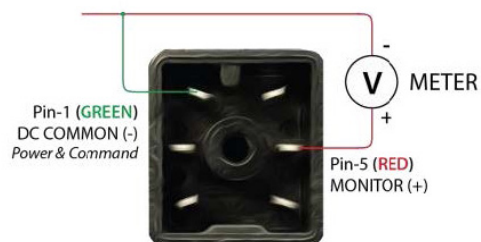


Current Command Valves (I)


All current command QL3s use a differential current loop scheme (not isolated), meaning current flow is from Pin 4 to Pin 2 on the QB valve. Some applications may require the common of the power supply that provides loop power for the 4-20mA command to be tied to power supply common. The following diagram shows the correct connection for conventional current flow.

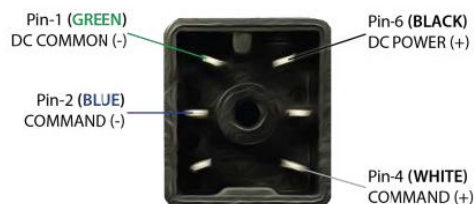

Current Sinking Monitor (C)

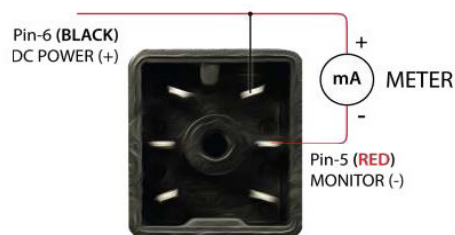

Current Sourcing Monitor (S)

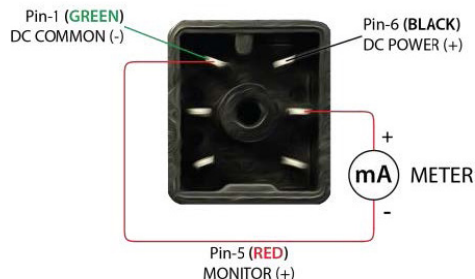

RE-CALIBRATION PROCEDURE

All QL3 control valves come calibrated from the factory by trained personnel using precision calibration equipment. The QL3 valve is a closed loop control valve using a precision electronic pressure sensor. Typical drift is less than 1% over the life of the product. If your QL3 valve appears to be out of calibration by more than 1%, it is not likely to be the QL3. Check the system for plumbing leakage, wiring and electronic signal levels. Verify the accuracy of your measuring equipment before re-calibrating. Consult factory if you have any questions or require assistance.

POTENTIOMETER IDENTIFIERS:

EXTP — Exhaust Trip Point

BIAS — Valve Bias Voltage


INT — Integral

PROP — Proportional


SPAN — Span Adjust

ZERO — Zero Adjust

NOTE: PID settings are factory set and should not require recalibration. If needed, please consult factory for adjustment procedures.

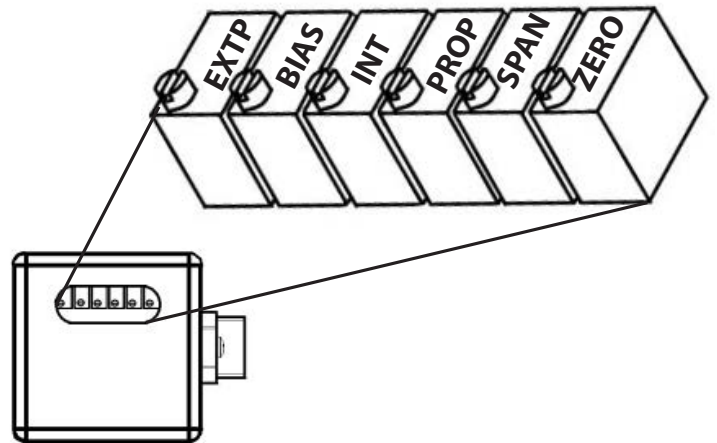

DIMENSIONS

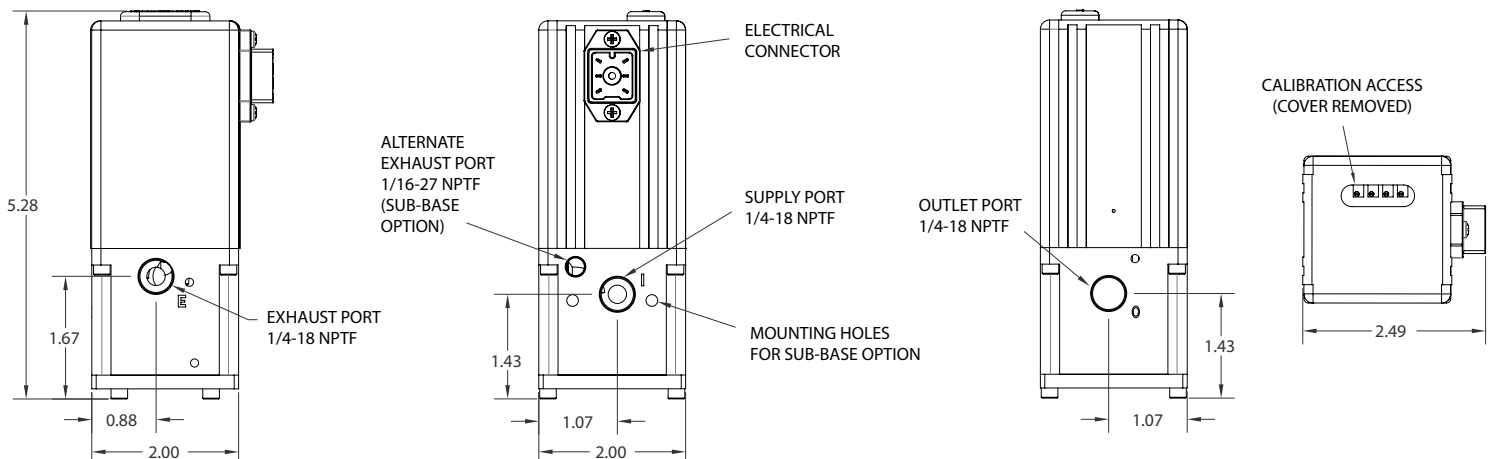

| | | | |
|----------|------------|----------|-------------------------------|
| ACCURACY | ±0.4% F.S. | PRESSURE | 0-5 thru 0-125 psig (8.6 Bar) |
| | 1/4" | | 25 SCFM (708 SLPM) |

| Example Part Number | QL | 3 | A | N | E | E | Z | | P | 125 | PS | G | 02 | |
|----------------------|----|---|---|---|---|---|---|---|---|-----|----|---------|----|--|
| Section Reference -> | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | OPTIONS | | |

| 1 | Manifold Material | 2 | Thread Type |
|---|------------------------|---|-------------|
| A | Nickel-Plated Aluminum | N | NPT |
| B | Nickel-Plated Brass | P | BSPP |

| 3 | Command Signal Range |
|---|--|
| E | 0 to 10 VDC |
| I | 4 to 20 mADC |
| K | 0 to 5 VDC |
| V | 1 to 5 VDC (Requires V for Monitor Signal #4) |
| A | RS232 Modbus Serial Command (Requires X for Monitor Signal #4) |
| B | RS458 Serial Command (Requires X for Monitor Signal #4) |
| P | P2 Profiler (Integrated) |

| 4 | Monitor Signal Range |
|---|---|
| X | No Monitor |
| E | 0 to 10 VDC |
| K | 0 to 5 VDC (Requires E, I or K for Command Signal Range (#3)) |
| V | 1 to 5 VDC (Requires V for Command Signal Range (#3)) |
| C | 4 to 20 mADC (Sinking) |
| S | 4 to 20 mADC (Sourcing) |

| 5 | Zero Offset |
|---|-------------------------------|
| P | 0% Pressure is Above Zero |
| Z | 0% Pressure is Zero (Typical) |

| 6 | Zero Offset Pressure |
|---|--|
| | Typical is 0* - If greater than 30% of full scale pressure (#8), please consult factory. |
| | *If Z for Zero Offset, Please Leave this Section (#6) Blank |

| 7 | Full Scale Pressure Type |
|---|-----------------------------|
| P | 100% Pressure is Above Zero |
| Z | 100% Pressure is Zero |

| 8 | Full Scale Pressure |
|---|--|
| | Must be less than or equal to 125 psig |

| 9 | Pressure Unit | | |
|----|----------------|---|----|
| PS | PSI | Inches Hg | IH |
| MB | Millibars | Inches H ₂ O | IW |
| BR | Bar | Millimeters H ₂ O | MW |
| KP | Kilo-pascal | Kilograms/cm ² | KG |
| MP | Mega-pascal | Torr (Requires A for Unit of Measure #10) | TR |
| MH | Millimeters Hg | Centimeters H ₂ O | CW |
| PA | Pascal | | |

| 10 | Pressure Unit of Measure |
|----|--------------------------|
| G | Gauge Pressure |

| Options | |
|-----------------|--------------------------------|
| BR ¹ | Foot-Mounted Bracket + Install |
| DD | Digital Display |
| O2* | Oxygen Cleaned |
| O3 | Oxygen Cleaned Non-O2 Use |
| P1 | 12-VDC Power |

¹We highly recommend the BR option if using a foot-mounted bracket to prevent contamination or product damage with the QL3.
 *O2 cleaning only available on brass manifold.
 Many other options are available. Please consult factory for more information.



| Recommended Accessories | |
|--|---|
| QBT-C-6 | 6 ft. Power/Command/Monitor Cable |
| QBT-01 | Wrap-Around Mounting Bracket |
| QBT-03* | Uninstalled Foot-Mount Bracket and Screws |
| *Include BR option on part number for factory-installed foot mount bracket. We highly recommend the BR option to prevent contamination or product damage with the QL3. | |

SAFETY PRECAUTIONS

Please read the following safety information before installing or operating any Proportion-Air, Inc. equipment or accessories. To confirm safety, observe 'ISO 4414: Pneumatic Fluid Power - General rules relating to systems' and other safety practices.

WARNING

Improper operation could result in serious injury or loss of life!

1. PRODUCT COMPATIBILITY

Proportion-Air, Inc. products and accessories are for use in industrial pneumatic applications with compressed air media. The compatibility of the equipment is the responsibility of the end user. Product performance and safety are the responsibility of the person who determined the compatibility of the system. Also, this person is responsible for continuously reviewing the suitability of the products specified for the system, referencing the latest catalog, installation manual, Safety Precautions and all materials related to the product.

2. EMERGENCY SHUTOFF

Proportion, Inc. products cannot be used as an emergency shutoff. A redundant safety system should be installed in the system to prevent serious injury or loss of life.

3. EXPLOSIVE ATMOSPHERES

Products and equipment should not be used where harmful, corrosive or explosive materials or gases are present. Unless certified, Proportion-Air, Inc. products cannot be used with flammable gases or in hazardous environments.

4. AIR QUALITY

Clean, dry air is not required for Proportion-Air, Inc. products. However, a 40 micron particulate filter is recommended to prevent solid contamination from entering the product.

5. TEMPERATURE

Products should be used with a media and ambient environment inside of the specified temperature range of 32°F to 158°F. Consult factory for expanded temperature ranges.

6. OPERATION

Only trained and certified personnel should operate electronic and pneumatic machinery and equipment. Electronics and pneumatics are very dangerous when handled incorrectly. All industry standard safety guidelines should be observed.

7. SERVICE AND MAINTENANCE

Service and maintenance of machinery and equipment should only be handled by trained and experienced operators. Inspection should only be performed after safety has been confirmed. Ensure all supply pressure has been exhausted and residual energy (compressed gas, springs, gravity, etc.) has been released in the entire system prior to removing equipment for service or maintenance.

CAUTION

Improper operation could result in serious injury to people or damage to equipment!

1. PNEUMATIC CONNECTION

All pipes, pneumatic hose and tubing should be free of all contamination, debris and chips prior to installation. Flush pipes with compressed air to remove any loose particles.

2. THREAD SEALANT

To prevent product contamination, thread tape is not recommended. Instead, a non-migrating thread sealant is recommended for installation. Apply sealant a couple threads from the end of the pipe thread to prevent contamination.

3. ELECTRICAL CONNECTION

To prevent electronic damage, all electrical specifications should be reviewed and all electrical connections should be verified prior to operation.

EXEMPTION FROM LIABILITY

1. Proportion-Air, Inc. is exempted from any damages resulting from any operations not contained within the catalogs and/or instruction manuals and operations outside the range of its product specifications.

2. Proportion-Air, Inc. is exempted from any damage or loss whatsoever caused by malfunctions of its products when combined with other devices or software.

3. Proportion-Air, Inc. and its employees shall be exempted from any damage or loss resulting from earthquakes, fire, third person actions, accidents, intentional or unintentional operator error, product misapplication or irregular operating conditions.

4. Proportion-Air, Inc. and its employees shall be exempted from any damage or loss, either direct or indirect, including consequential damage or loss, claims, proceedings, demands, costs, expenses, judgments, awards, loss of profits or loss of chance and any other liability whatsoever including legal expenses and costs, which may be suffered or incurred, whether in tort (including negligence), contract, breach of statutory duty, equity or otherwise.

WARRANTY

Proportion-Air, Inc. products are warranted to the original purchaser only against defects in material or workmanship for eighteen (18) months from the date of manufacture. The extent of Proportion-Air's liability under this warranty is limited to repair or replacement of the defective unit at Proportion-Air's option. Proportion-Air shall have no liability under this warranty where improper installation or filtration occurred.

PROPORTION

ProportionAir.com

8250 N 600 W

P.O. Box 218

McCordsville, IN 46055

info@proportionair.com

Handcrafted in the USA
ISO 9001-2015 Certified