

## INSTALLATION, OPERATION AND MAINTENANCE GUIDE

### QB1S & QB2S

#### Specifications

##### Electrical

Supply voltage	15-24 VDC
Supply current	250 mADC
Command signal	0-10 VDC   4-20 mADC
Voltage monitor signal	0-10 VDC@ 20 mA
Current monitor signal	4-20 mA sinking or sourcing
Command signal impedance	Voltage: 10 kΩ Current: 100 Ω

##### Mechanical

Inlet pressure	Full vacuum-550 PSIG
Pressure range	Full vacuum-500 PSIG
Peak flow rate	1.2 SCFM @100 PSIG inlet
Filtration required	40 micron (included)
Accuracy	±0.2% F.S. typical
Repeatability	±0.05% F.S.
Port size	1/8 NPT or BSPP Female
Critical volume	1 in <sup>3</sup>

##### Wetted Parts

Elastomers	Fluorocarbon
Solenoid valves	Nickel-plated brass
Manifold	Aluminum, stainless steel or nickel-plated brass
Pressure transducer	Stainless steel

##### Physical

Operating temperature	32°-158° F (0°-70° C)
Protection rating	
Weight	
Aluminum	1.00 lb (0.45 Kg)
Stainless steel	1.38 lb (0.63 Kg)
Brass	1.43 lb (0.65 Kg)
Electrical connector	6-pin Hirschmann



QB1S

QB2S

### INSTALLATION

1. Apply a small amount of thread sealant (provided) to the male threads of the in-line filter supplied with valve. **CAUTION: USE ONLY THE THREAD SEALANT PROVIDED. OTHER SEALANTS, SUCH AS PTFE TAPE OR PIPE DOPE, CAN MIGRATE INTO THE FLUID SYSTEM CAUSING FAILURES.**
2. Install the in-line filter into the port labeled "I" on QBS valve.
3. For vacuum or vacuum through positive pressure units, the vacuum supply should be connected to the exhaust port of the QBS.
4. Connect supply line to the in-line filter port. Connect device being controlled to port labeled "O" on QBS valve.
5. Mount unit accordingly.
6. The unit can be mounted in any position without affecting performance. Mounting bracket QBT-01 (ordered separately) can be used to attach valve to a panel or wall surface.
7. Proceed with electrical connections.

### WARNING

These products are intended for use in industrial compressed gas systems only. Do not use these products where pressures and temperatures exceed the specifications listed.


# ELECTRICAL CONNECTIONS

1. Turn off all power to unit.
2. Identify the valve's command input and analog output using the calibration card included in the package and the ordering information section later in this booklet.
3. Proceed to the appropriate section corresponding to the type of valve being installed.


NOTE: ALL COLOR CODES RELATE TO THE FACTORY-WIRED QBT-C-XX POWER CORD.

## Command Signal Configurations

### Voltage Command Valves (E, K, V)

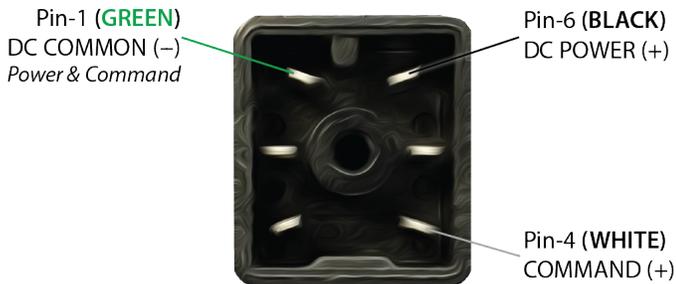


### Current Command Valves (I)

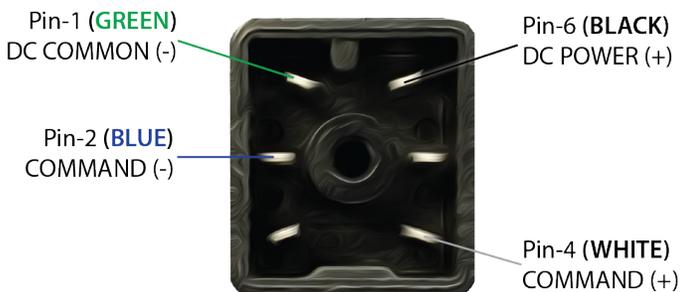


## Monitor Signal Configurations


### Voltage Monitor (IE or EE)

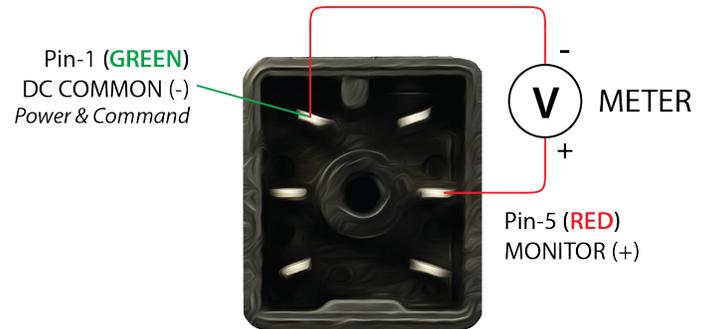

### Current Sinking Monitor (EC or IC)

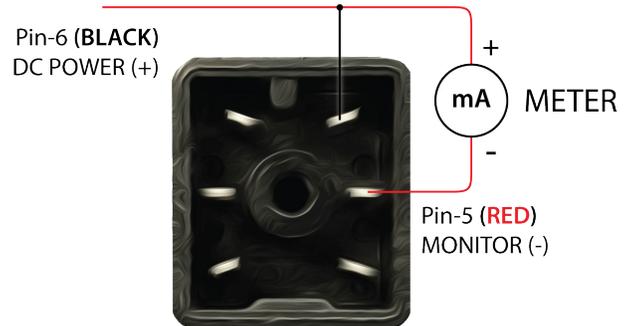

### Current Sourcing Monitor (ES or IS)

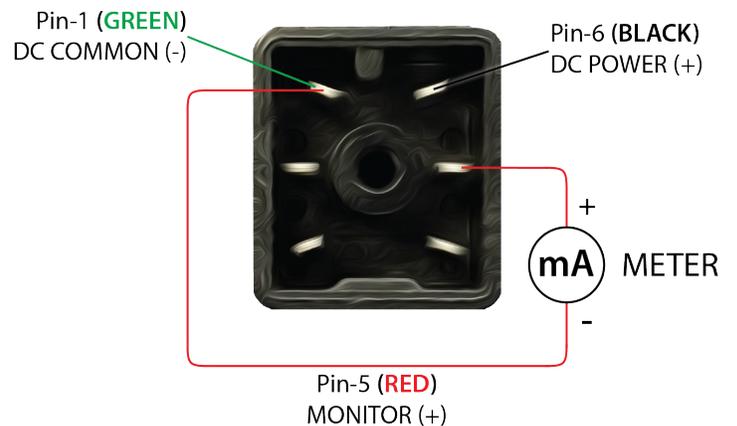


# ELECTRICAL CONNECTIONS


## QB2S Second Loop Connections

All QB2 valves are designed to accept a 0-10 volt second loop input signal, unless ordered with special option code C2 (4-20 mA second loop input). Reference the following wiring diagrams for details.


### QB2S without 3D Option

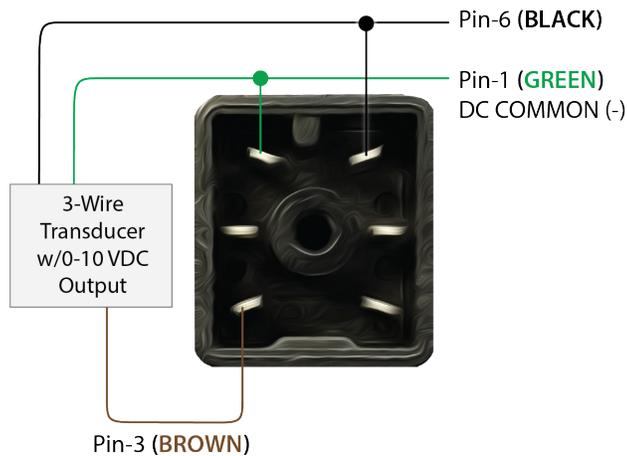

### QB2S with 3D Option

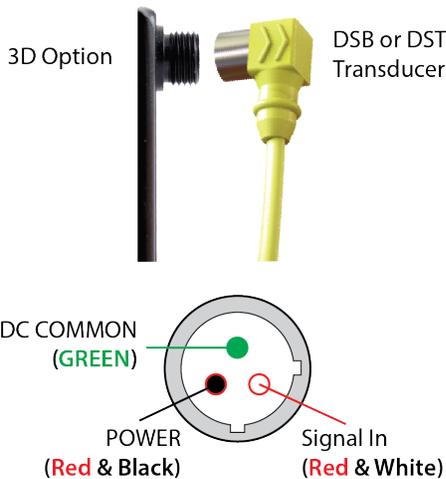


### QB2S with C2 Option (mA 2nd Loop Feedback w/o 3D option)

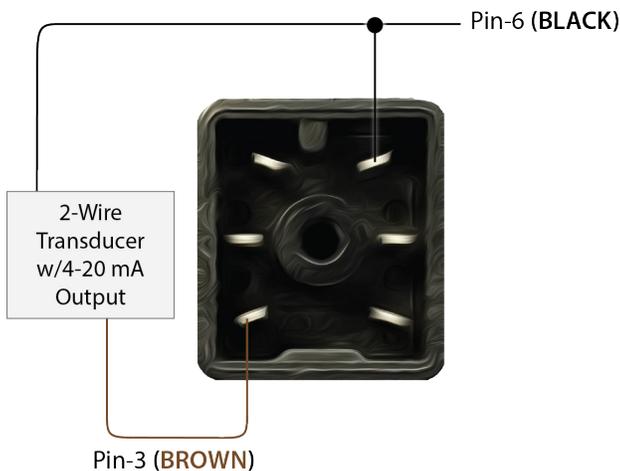


# CHARTS

## Linearity

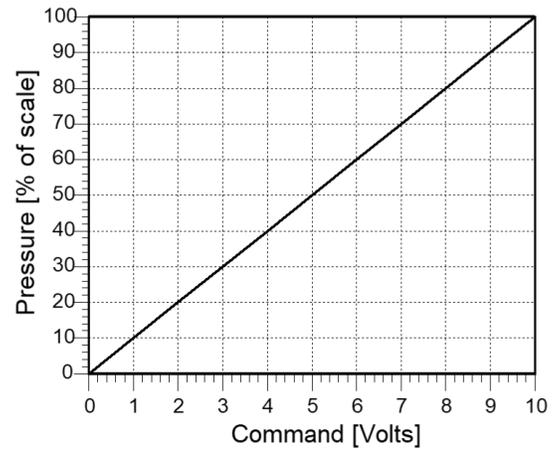

## Response Time

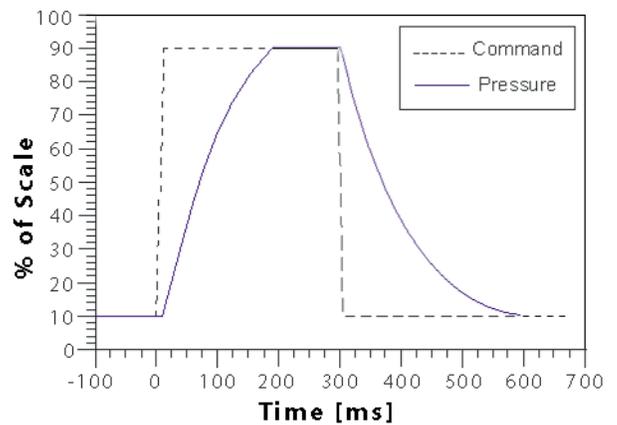


**Table 1**  
**Rated Inlet Pressure for Standard QBS Valves**

Max Calibrated Pressure	Max Inlet Pressure*
Vacuum to 10 psig (0.69 bar)	Contact Factory
10.1 to 30 psig (0.70 to 2 bar)	35 psig (2.4 bar)
31 to 100 psig (2.1 to 7 bar)	110 psig (7.6 bar)
101 to 175 psig (7 to 12 bar)	190 psig (13 bar)
176 to 300 psig (12.1 to 20.7 bar)	330 psig (22.8 bar)
301 to 500 psig (20.8 to 34.5 bar)	550 psig (37.9 bar)

\*Unless unit has inlet valve option

# DIMENSIONS

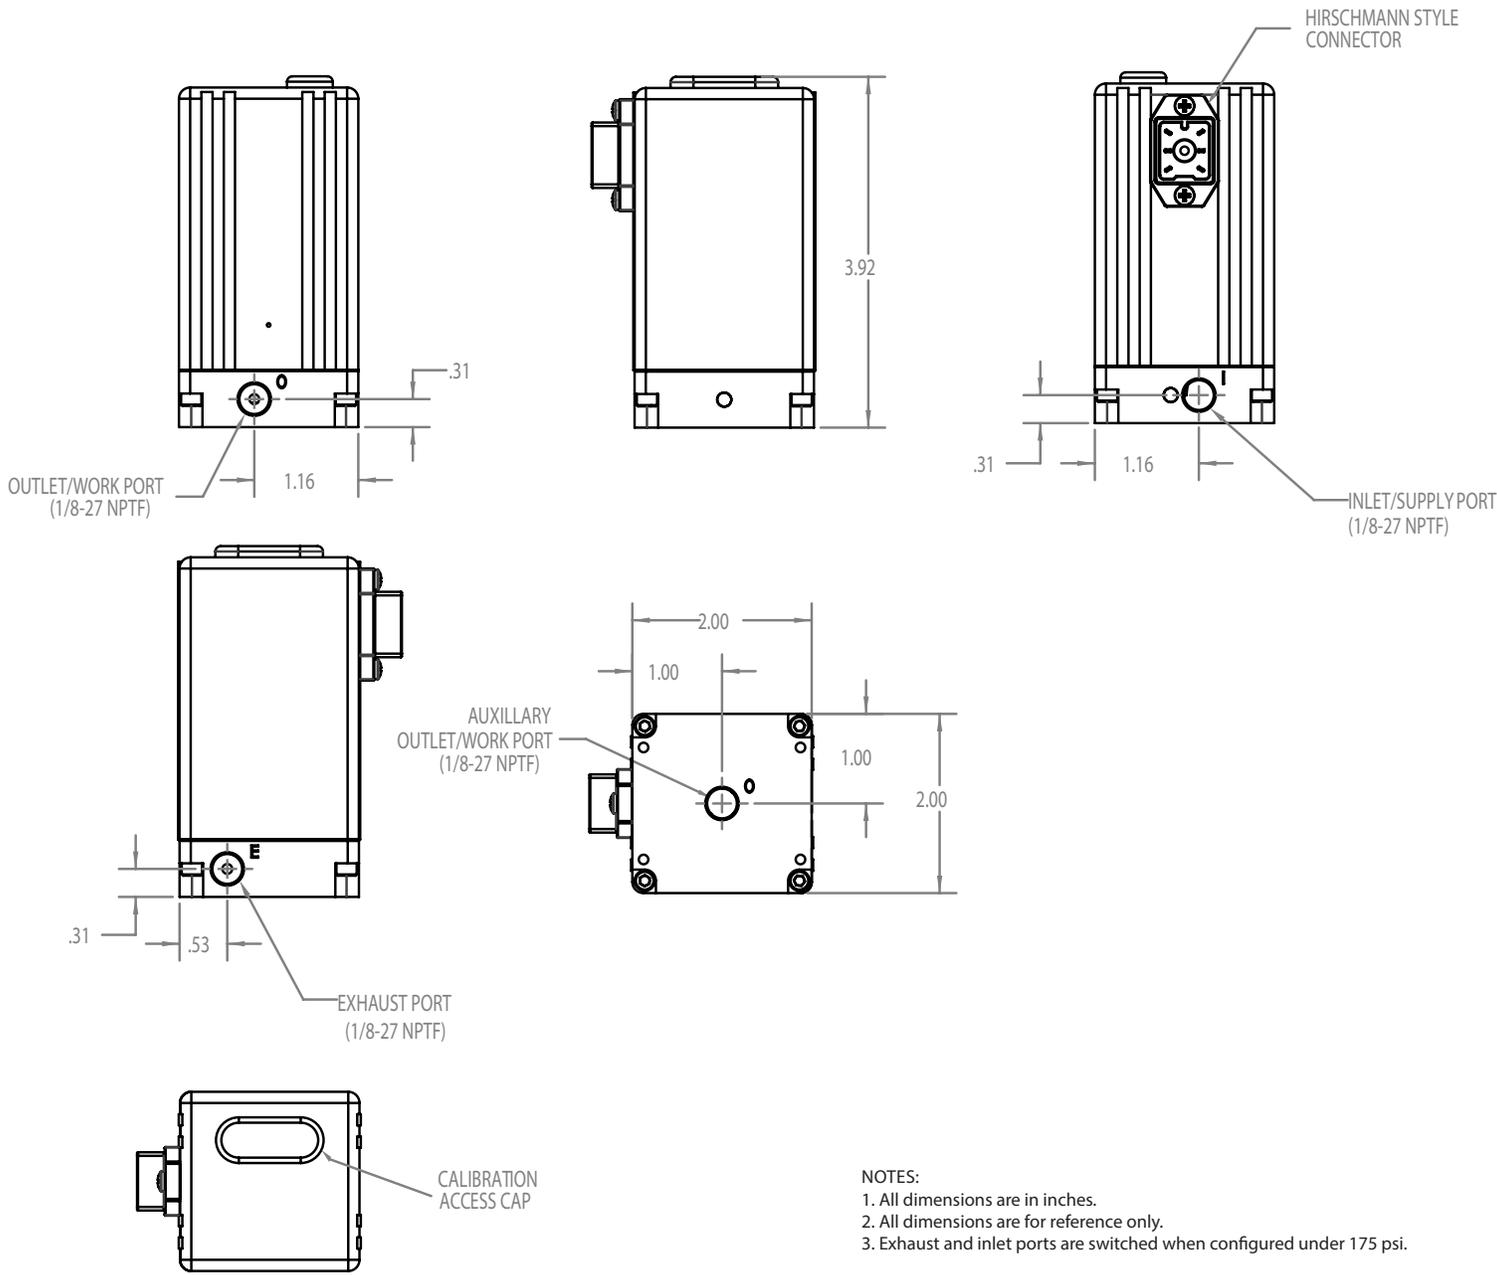

- NOTES:
1. All dimensions are in inches.
  2. All dimensions are for reference only.
  3. Exhaust and inlet ports are switched when configured under 175 psi.

# RE-CALIBRATION PROCEDURE

All QBS pressure regulators come calibrated from the factory by trained personnel using precision calibration equipment. The QBS is a closed loop control regulator using a precision electronic pressure sensor. Typical drift is less than 1% over the life of the product. If your QBS valve appears to be out of calibration by more than 1%, it is not likely to be QBS. Check the system for plumbing leakage, wiring and electronic signal levels. Verify the accuracy of your measuring equipment before re-calibrating.

Consult the factory if you have any questions or require assistance. If the QBS valve needs re-calibration, use the procedure described below:

## QB1S

1. Identify the inputs and outputs of the valve using the model number of the valve, calibration card included with the valve, and the information provided in this sheet.
2. Connect a precision measuring gage or pressure transducer to the OUT port of the QBS.  
*NOTE: THERE MUST BE A CLOSED VOLUME OF AT LEAST 1 CU. IN. (17 CC) BETWEEN THE VALVE OUTLET AND THE MEASURING DEVICE FOR THE VALVE TO BE STABLE.*
3. Connect the correct supply source to the IN port of the QBS, making sure the pressure does not exceed the rating for the valve (Table 1).
4. Locate the plastic calibration access cap on top of the QBS valve and completely remove it. Located underneath are two adjustment trim pots, Zero "Z" and Span "S." See figure 1 for pots location.
5. *NOTE: Only use this step if your device is totally out of calibration. If it is slightly out of calibration, omit this step and move on to step 6.* Using a small screwdriver, turn both trim pots 15 turns clockwise. Then turn both trim pots 7 turns counterclockwise. This will put the QB roughly at mid-scale.
6. Make correct electrical connections as noted. Make sure there is a proper meter in place to measure the command input to the QBS.
7. Set the electrical command input to MAXIMUM value.
8. Adjust the SPAN pot until MAXIMUM desired pressure is reached (clockwise increases pressure).
9. Set the electrical command input to MINIMUM value.
10. Adjust the ZERO pot until MINIMUM desired pressure is reached (clockwise increases pressure).
11. Repeat ZERO and SPAN adjustments (steps 7-10), which interact slightly, until QB1 valve is calibrated back to proper range.
12. If at any time during the calibration procedure the QBS oscillates or becomes unstable for more than one second, turn the HYSTERESIS pot counter-clockwise until the oscillation stops, then turn it one more complete turn (same direction).
13. Replace calibration access cap.

## QB2S

*This section assumes there is a properly scaled and calibrated transducer for use as 2nd loop feedback signal. For information on re-calibrating Proportion-Air DS series pressure transducers, see sheet DS-Installation.pdf.*

1. Follow steps 1-5 as noted in the QB1S section.
2. Make correct electrical connections as noted. Make sure there is a proper meter in place to measure the command input to the QB2S. Make sure the 2nd loop signal is connected.
3. Set the electrical command input to MAXIMUM value.
4. Adjust the SPAN pot until MAXIMUM desired pressure is reached (clockwise increases pressure).
5. Set the electrical command input to MINIMUM value.
6. Adjust the ZERO pot until MINIMUM desired pressure is reached (clockwise increases pressure).
7. Repeat ZERO and SPAN adjustments (steps 3-6), which interact slightly, until QB2S valve is calibrated back to proper range.
8. If at any time during the calibration procedure the QBS oscillates or becomes unstable for more than one second, turn the HYSTERESIS pot counter-clockwise until the oscillation stops, then turn it one more complete turn (same direction).
9. Replace calibration access cap.

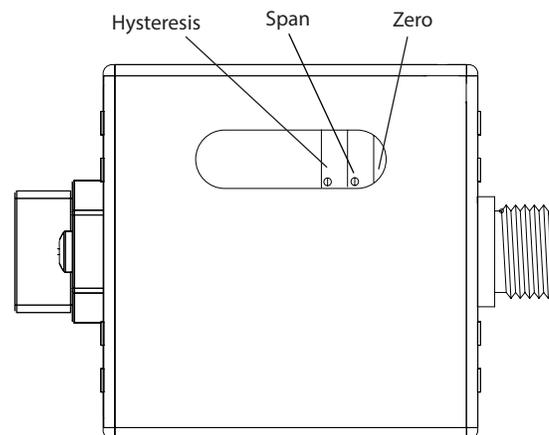


Figure 1. (QB2S, shown with 3D option)

<b>ACCURACY</b>	±0.5% F.S.	<b>PRESSURE</b>	Full Vac to 500 PSIG (34 Bar)
<b>PORT SIZE</b>	1/8"	<b>MAX FLOW</b>	1.2 SCFM (34 SLPM)

Example Part Number	<b>QB</b>	<b>1</b>	<b>S</b>	<b>S</b>	<b>N</b>	<b>I</b>	<b>S</b>	<b>Z</b>	<b>P</b>	<b>435</b>	<b>PS</b>	<b>G</b>	<b>02</b>	
Section Reference ->		1		2	3	4	5	6	7	8	9	10	11	OPTIONS

1 Type	
1	Single Loop
2	Dual Loop

2 Manifold Material	
A	Anodized Aluminum
S	303 Stainless Steel
B	Brass



3 Thread Type	
N	NPT
P	BSPP

4 Command Signal Range	
E	0 to 10 VDC
I	4 to 20 mA DC
K	0 to 5 VDC
V	1 to 5 VDC (Requires V for Monitor Signal #5)

5 Monitor Signal Range	
X	No Monitor
E	0 to 10 VDC
K	0 to 5 VDC*
V	1 to 5 VDC* <sup>1</sup>
C	4 to 20 mA DC (Sinking)
S	4 to 20 mA DC (Sourcing)
*Requires E, I or K for Command Signal Range (#4)	
* <sup>1</sup> Requires V for Command Signal Range (#4)	

6 Zero Offset	
N	0% Pressure is Below Zero
P	0% Pressure is Above Zero
Z	0% Pressure is Zero (Typical)

8 Full Scale Pressure Type	
P	100% Pressure is Above Zero

9 Full Scale Pressure	
Must be between 50 and 500 psig*	

7 Zero Offset Pressure	
Typical is 0* - If greater than 30% of full scale pressure (#9), please consult factory.	
*If Z for Zero Offset, Please Leave this Section (#7) Blank	

10 Pressure Unit			
PS	PSI	Inches Hg	IH
MB	Millibars	Inches H <sub>2</sub> O	IW
BR	Bar	Millimeters H <sub>2</sub> O	MW
KP	Kilo-pascal	Kilograms/cm <sup>2</sup>	KG
MP	Mega-pascal	Torr (Requires A for Unit of Measure #11)	TR
MH	Millimeters Hg	Centimeters H <sub>2</sub> O	CW
PA	Pascal		

11 Pressure Unit of Measure	
A	Absolute Pressure
G	Gauge Pressure

Options	
3D	3-Pin Connector
BF	Bottom Mount 1/4" Male Fitting
BR	Foot-Mounted Bracket + Install
O2*	Oxygen Cleaned
O3**	Oxygen Cleaned Non-O2 Use
P1	12-VDC Power
TF†	Test Under Flow

\*O2 cleaning only available on brass manifold.  
 \*\*O3 cleaning for non-O2 use only available on stainless steel manifolds.  
 †Only on QB2S when used with a 1:1 volume booster.  
 Many other options are available. Please consult factory for more information.

Recommended Accessories	
QBT-C-6	6 ft. Power/Command/Monitor Cable
QBT-01	Wrap-Around Mounting Bracket
QBTS-02*	Uninstalled Foot-Mount Bracket and Screws
*Include BR option on part number for factory-installed foot mount bracket	

## **SAFETY PRECAUTIONS**

Please read the following safety information before installing or operating any Proportion-Air, Inc. equipment or accessories. To confirm safety, observe 'ISO 4414: Pneumatic Fluid Power - General rules relating to systems' and other safety practices.

### **WARNING**

Improper operation could result in serious injury or loss of life!

#### **1. PRODUCT COMPATIBILITY**

Proportion-Air, Inc. products and accessories are for use in industrial pneumatic applications with compressed air media. The compatibility of the equipment is the responsibility of the end user. Product performance and safety are the responsibility of the person who determined the compatibility of the system. Also, this person is responsible for continuously reviewing the suitability of the products specified for the system, referencing the latest catalog, installation manual, Safety Precautions and all materials related to the product.

#### **2. EMERGENCY SHUTOFF**

Proportion, Inc. products cannot be used as an emergency shutoff. A redundant safety system should be installed in the system to prevent serious injury or loss of life.

#### **3. EXPLOSIVE ATMOSPHERES**

Products and equipment should not be used where harmful, corrosive or explosive materials or gases are present. Unless certified, Proportion-Air, Inc. products cannot be used with flammable gases or in hazardous environments.

#### **4. AIR QUALITY**

Clean, dry air is not required for Proportion-Air, Inc. products. However, a 40 micron particulate filter is recommended to prevent solid contamination from entering the product.

#### **5. TEMPERATURE**

Products should be used with a media and ambient environment inside of the specified temperature range of 32°F to 158°F. Consult factory for expanded temperature ranges.

#### **6. OPERATION**

Only trained and certified personnel should operate electronic and pneumatic machinery and equipment. Electronics and pneumatics are very dangerous when handled incorrectly. All industry standard safety guidelines should be observed.

#### **7. SERVICE AND MAINTENANCE**

Service and maintenance of machinery and equipment should only be handled by trained and experienced operators. Inspection should only be performed after safety has been confirmed. Ensure all supply pressure has been exhausted and residual energy (compressed gas, springs, gravity, etc.) has been released in the entire system prior to removing equipment for service or maintenance.

### **CAUTION**

Improper operation could result in serious injury to people or damage to equipment!

#### **1. PNEUMATIC CONNECTION**

All pipes, pneumatic hose and tubing should be free of all contamination, debris and chips prior to installation. Flush pipes with compressed air to remove any loose particles.

#### **2. THREAD SEALANT**

To prevent product contamination, thread tape is not recommended. Instead, a non-migrating thread sealant is recommended for installation. Apply sealant a couple threads from the end of the pipe thread to prevent contamination.

#### **3. ELECTRICAL CONNECTION**

To prevent electronic damage, all electrical specifications should be reviewed and all electrical connections should be verified prior to operation.

### **EXEMPTION FROM LIABILITY**

**1. Proportion-Air, Inc.** is exempted from any damages resulting from any operations not contained within the catalogs and/or instruction manuals and operations outside the range of its product specifications.

**2. Proportion-Air, Inc.** is exempted from any damage or loss whatsoever caused by malfunctions of its products when combined with other devices or software.

**3. Proportion-Air, Inc.** and its employees shall be exempted from any damage or loss resulting from earthquakes, fire, third person actions, accidents, intentional or unintentional operator error, product misapplication or irregular operating conditions.

**4. Proportion-Air, Inc.** and its employees shall be exempted from any damage or loss, either direct or indirect, including consequential damage or loss, claims, proceedings, demands, costs, expenses, judgments, awards, loss of profits or loss of chance and any other liability whatsoever including legal expenses and costs, which may be suffered or incurred, whether in tort (including negligence), contract, breach of statutory duty, equity or otherwise.

### **WARRANTY**

Proportion-Air, Inc. products are warranted to the original purchaser only against defects in material or workmanship for eighteen (18) months from the date of manufacture. The extent of Proportion-Air's liability under this warranty is limited to repair or replacement of the defective unit at Proportion-Air's option. Proportion-Air shall have no liability under this warranty where improper installation or filtration occurred.



ProportionAir.com

8250 N 600 W

P.O. Box 218

McCordsville, IN 46055

*info@proportionair.com*

Handcrafted in the USA  
ISO 9001-2015 Certified